




INSTALLATION INSTRUCTIONS

BLOWER MEMORY KIT MODEL 3230

Instr. No. 2650-254A

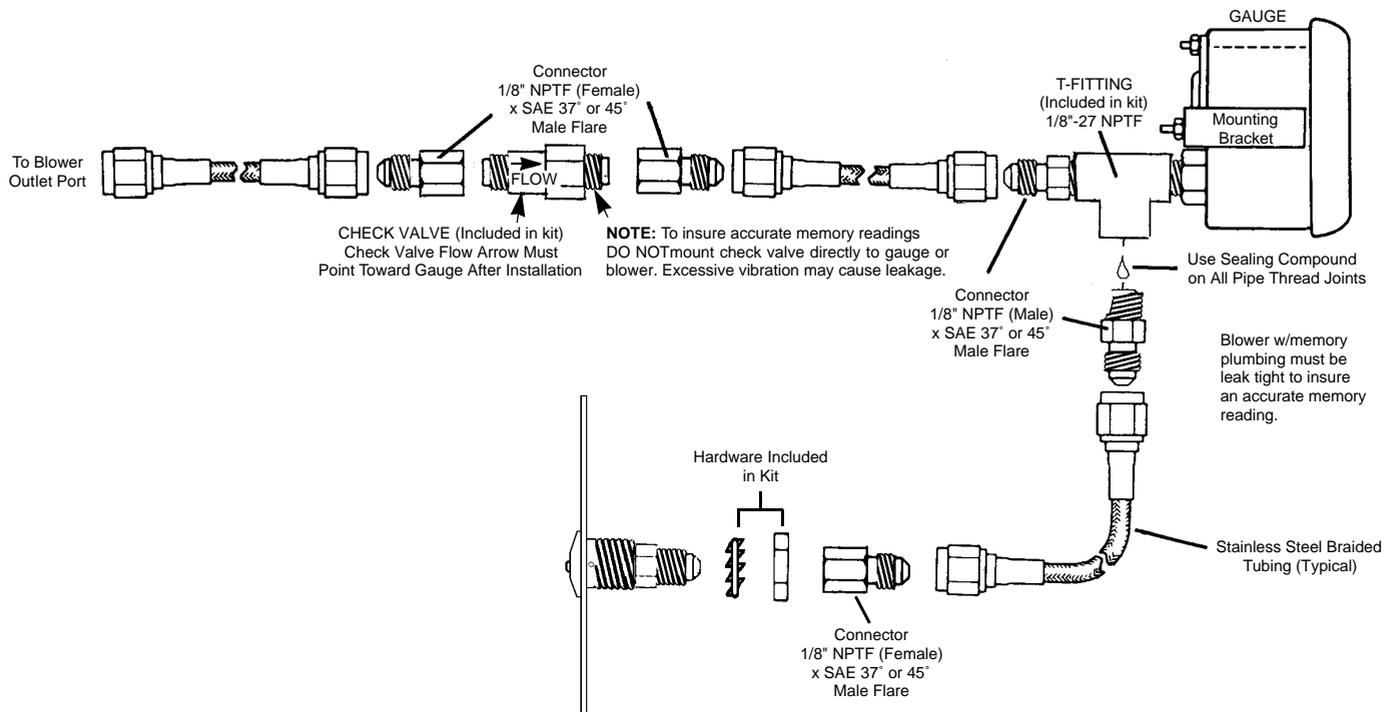

1. Secure two 1/8"-27 NPTF male x SAE 37° or 45° male flare connectors to the 1/8"-27 NPTF T-Fitting as shown in the installation above.

NOTE: The connector flare (37° or 45°) must be compatible with the ends on the stainless steel braided tubing. Auto Meter braided stainless steel tubing kits no. 3227 and 3228 include #4 SAE 37° flare female swivel ends.

2. Secure the T-Fitting from Step 1 to the gauge port. Tighten T-Fitting and orient in desired direction. **NOTE: Use sealing compound to assure proper seal on all pipe thread joints (NPTF).**

3. Drill hole and install Rubber Grommet where pressure line passes through firewall into the engine compartment.

4. Secure two 1/8"-27 NPTF female x SAE 37° or 45° male flare connectors to the Check Valve as shown above. Secure the Check Valve and connector assembly to one end of a length of braided stainless steel tubing. **NOTE: The arrow on the Check Valve must be pointing toward the gauge after installation.**

5. Secure the opposite end of the tubing and Check Valve assembly to the T-Fitting on back of gauge.

6. Route the pressure line through the firewall into the engine compartment. Connect another length of braided stainless steel tubing between the Check Valve and the blower outlet port.

NOTE: Keep line clear of moving parts.

7. Secure an 1/8"-27 NPTF male x SAE 37° or 45° male flare connector to the bleed valve.

8. Using the nut and lockwasher provided, secure the bleed valve and connector assembly in-dash or wherever it is convenient for the driver.

9. Connect a length of braided stainless steel tubing between the T-Fitting on back of gauge and the bleed valve.

10. Start engine and thoroughly check for any leaks. When engine is shut off, gauge should not leak down until bleed valve is pushed. If gauge leaks check and tighten all connections.

SERVICE

For service send your product to Auto Meter in a well packed shipping carton. Please include a note explaining what the problem is along with your phone number. Please specify when you need the product back. If you need it back immediately mark the outside of the box "RUSH REPAIR," and Auto Meter will service product within two days after receiving it. (\$10.00 charge will be added to the cost of "RUSH REPAIR.") If you are sending product back for Warranty adjustment, you must include a copy (or original) of your sales receipt from the place of purchase.

12 MONTH LIMITED WARRANTY

Auto Meter Products, Inc. warrants to the consumer that all Auto Meter High Performance products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12 month warranty period will be repaired or replaced at Auto Meter's option to the consumer, when it is determined by Auto Meter Products, Inc. that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter instruments. In no event shall this warranty exceed the original purchase price of the Auto Meter instruments nor shall Auto Meter Products, Inc. be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12 month warranty period. Breaking the instrument seal, improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Products, Inc. disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter.

FOR SERVICE SEND TO: **AUTO METER PRODUCTS, INC.** 413 W. Elm St., Sycamore, IL 60178 USA (815) 895-8141